 





Gcandy


Revolutionary BIOSKIN material
As Close To The Human Skin

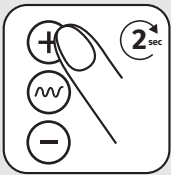

 Press and hold for two seconds to switch on

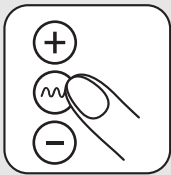

 Click to change the mode of vibration. The toy has 6 modes of vibration



Increase the vibration



Decrease the vibration /OFF

 
EN Powerful motor for clitoris
 Powerful motor for vagina
 Press ⊕ and hold for two seconds to switch on.
 ⊕ increase the vibration
 Ⓜ modes of vibration
 ⊖ decrease the vibration /OFF

DE Leistungsstarker Motor für die Klitoris
 Leistungsstarker Motor für die Vagina
 Für die Entsicherung drücke ⊕ und halte den Knopf für zwei Sekunden lang gedrückt.
 ⊕ verstärken der Vibration
 Ⓜ schwingungsarten
 ⊖ vibration verringern / OFF

FR Moteur puissant pour le clitoris
 Moteur puissant pour le vagin
 Appuyez sur ⊕ et maintenez la touche enfoncée pendant deux secondes.
 ⊕ augmentation de la force de vibration
 Ⓜ modes de vibration
 ⊖ réduction de la force de vibration / OFF

ES Potente motor para el clítoris
 Potente motor para vagina
 Pulse ⊕ y mantenga pulsado durante 2 segundos.
 ⊕ aumentar la intensidad de la vibración
 Ⓜ modos de vibración
 ⊖ reducir la intensidad de la vibración / OFF

RU Один сильный мотор для клитора
 Сильный мотор для вагины
 Нажмите ⊕ и удерживайте 2 секунды для включения.
 ⊕ увеличение силы вибрации
 Ⓜ режимы вибрации
 ⊖ уменьшение силы вибрации /OFF

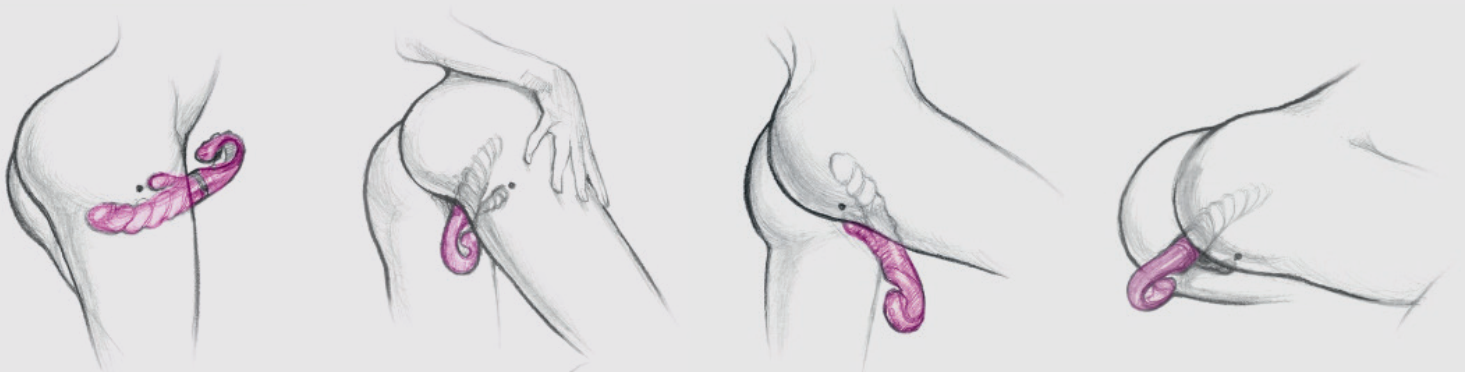

3-YEAR WARRANTY